

Check-List


To mount your flat panel monitor or any parts at an ergonomically correct position, start at step 1 and continue as directed.

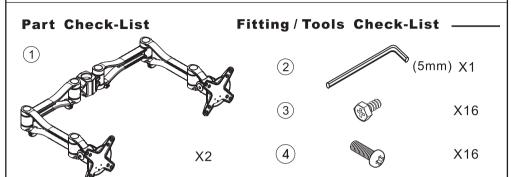

Part Check-List (6) (5) X1 (700L*4t)x1

Fitting / Tools Check-List —

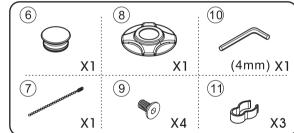






Step 1

Secure the cranking unit to the bracket with at least four screws. The use of screws and screws position depends thickness of desk. Fully secure screws with allenkey (5mm) provided.

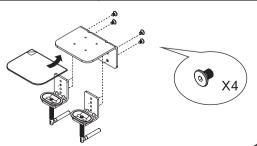

Assembly Guide

X1

Step 2


Fix the clamp on the desk. Use 4mm Allen key to secure the pole & clamp with 4 screws. For desks 15-85 mm thick. over 30 mm is suggested.

Step 3


Loosen two screws slightly, with 4mm Allen kev Put the arm into the post and adjust it to the suitable position. Tighten it up. Finally, put in the plua.

Step 4

(1)Please loosen the knob at first, and then apart the fixing lump.

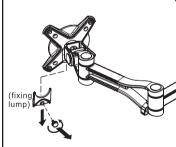

(2) Then, take VESA up.

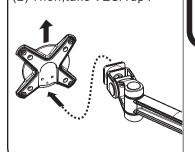

Step 5


Place LCD with facing downward on flat surface. Place VESA on the LCD back as figure and align to the screw holes. Secure them together with four screws. And then tighten them up with screwdriver(not provided).


These screws (M4/15L) are just for special monitor when the original screws are too short to fasten.





Then put the screw plate cover through the pole and check the pin position with the screw toaether.

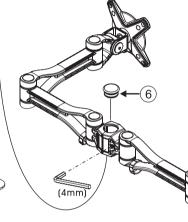


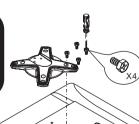

Assembly Guide


Step 6

Insert the VESA(with LCD display on already)into the arm and press it down. Then secure fixing lump on VESA with knob.(as figure down step 1. 2. 3)

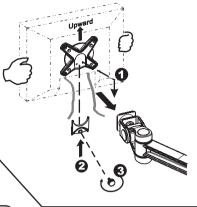


Step 7

cable management arrange cable on pole as required.

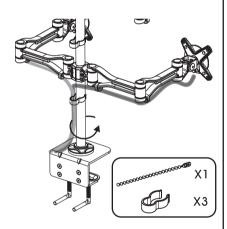



Step 8

If the arm is loose, please use the Allen Key(5mm) to tighten the screw.

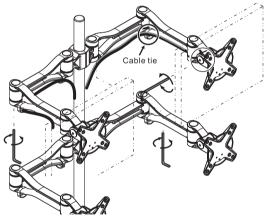

Cautions:




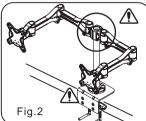



NewStar user's Manual

LCD Monitor Arm FPMA-D1030D4

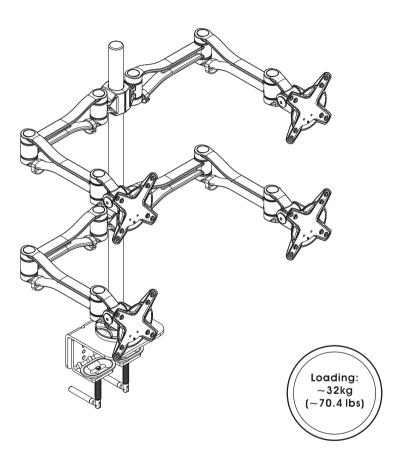



www.NewStar.nl Phone: + 31 (0) 23 547 88 88